 


MeDiFiT Pro

Zero Gravity

Full Body Shiatsu Massage Chair

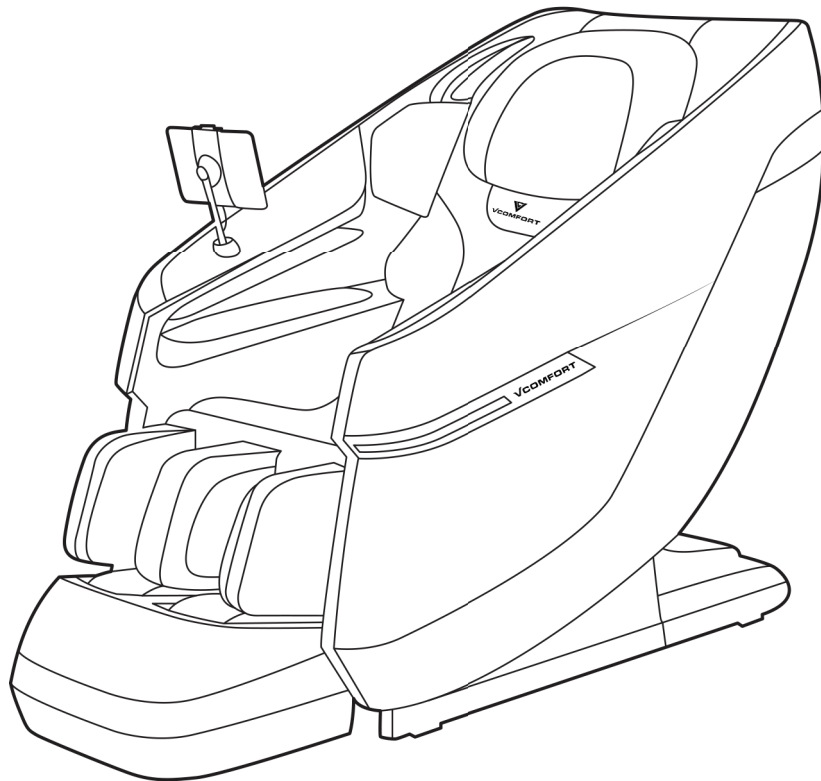

A36 SMART



Welcome to VComfort

Thank you and congratulations on purchasing a VComfort Massage Chair - you've made a great choice.

With half a decade of experience designing, building and servicing massage chairs, VComfort takes pride in every chair sold, including yours. We are here for you. The UK based Customer Care team can be reached at 0333 577 9597 or visit us online at www.vcomfort.co.uk.

Inside this manual, you will find everything you need to setup and safely enjoy your chair. Please review the entire manual before using your chair.

Get ready to sit back, relax and enjoy the exceptional Massage Experience.

Limited Warranty

We're confident that your new massage chair will provide you with many years of relaxation and trouble-free performance.

VComfort supply quality massage chairs that are built to last; your massage chair comes with a 1 year manufacturer's warranty for home use as standard to protect against manufacturing faults and defects that occur during this warranty period.

Warranty Limitations and Exclusions

Warranties do not cover any loss or damage resulting from: improper installation; unauthorized repairs; use in a commercial or corporate setting; alterations or modifications of original condition; improper use of electrical/power supply; loss of power; electrical disturbances and power surges; dropped product, including but not limited to remote controls; a malfunction or damage resulting from improper use or unreasonable use or maintenance; failure to follow operating instructions; transportation damage; theft; abuse; misuse; neglect; vandalism; or environmental conditions (fire, floods, rust, corrosion, sand, dirt, windstorm, hail, earthquake, or exposure to weather conditions); loss of use during the period the product is at a repair facility or otherwise awaiting parts or repair; and products purchased or acquired from unauthorized dealers. This warranty is not transferrable. Damage incurred due to shipping and handling does not constitute a defect under this warranty.

Warranty Registration (Home Use)

Register your product at www.vcomfort.co.uk/standard-warranty to ensure it is in our system. This will simplify the warranty process should you ever need it. Alternatively, scan the QR code to go directly to the URL above.



Warranty Registration (Commercial Use)

Our warranty for commercial use is 12 months.
Register your product at www.vcomfort.co.uk/commercial-warranty



We know you can't wait to sit in your new VComfort Massage chair! Take a picture of yourself enjoying the exceptional massage experience and make sure to tag us on social media with the hashtag [#vcomfortmassagechairs](https://www.instagram.com/vcomfortmassagechairs)

▶ IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using (this appliance).

DANGER - To reduce the risk of electric shock:

1) Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons: 1) An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.

2) Do not operate under a blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.

3) Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.

4) Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

5) Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.

6) Do not carry this appliance by supply cord or use cord as a handle.

7) Keep the cord away from heated surfaces.

8) Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.

9) Never drop or insert any object into any opening.

10) Do not use outdoors.

11) Do not operate where aerosol (spray) products are being used or where oxygen is being administered.

12) To disconnect, turn all controls to the off position, then remove the plug from the outlet. 13) Do not use a massager in close proximity to loose clothing or jewelry.

14) Keep long hair away from massager while in use.

15) Use heated surfaces carefully. May cause serious burns. Do not use over insensitive skin areas or in the presence of poor circulation. The unattended use of heat by children or incapacitated persons may be dangerous.

SAVE THESE INSTRUCTIONS

For use household only

Thank you for purchasing this product.

Please read this user manual carefully before using to ensure proper installation and operation.

Please keep this USER MANUAL properly for future reference.





▶ CONTENTS

| | |
|---|----|
| SAFETY PRECAUTIONS | 1 |
| NAME AND FUNCTION OF EACH COMPONENT | 3 |
| External Structure | 3 |
| Internal Structure | 3 |
| Power Box | 4 |
| Tablet Controller | 5 |
| Auto Programs | 5 |
| Combination Programs | 6 |
| Foot Care | 7 |
| Tablet Controller Instructions | 7 |
| Off-line Voice Control | 11 |
| PRELIMINARY CHECKS | 13 |
| Position & Placement for Installation | 13 |
| Floor Protection | 13 |
| Surrounding Environment | 13 |
| Grounding | 13 |
| Installation Method | 14 |
| Moving the Massage Chair | 15 |
| Connecting to Power | 15 |
| Commissioning | 16 |
| Before Sitting in the Chair | 16 |
| After Use | 16 |
| Care Instructions | 17 |
| TROUBLESHOOTING | 18 |
| TECHNICAL SPECIFICATIONS | 19 |

SAFETY PRECAUTIONS


Safety Precautions

- ▶ Before using, please read the SAFETY PRECAUTIONS carefully to ensure correct operation of this appliance.
- ▶ Precautions and warnings listed below will help to ensure proper operation of this appliance.
- ▶ The classes of accidents caused by incorrect use are classified into WARNING and CAUTION. Read all WARNINGS and CAUTIONS below and follow all instructions within this manual.


| | | | |
|---|----------------|---|----------------|
|  | WARNING | Improper operation may cause injury to users. | |
|  | CAUTION | Improper operation may cause injury to users or damage to product. | |
|  | Prohibited |  | NO Disassemble |

Not suitable for below persons


We recommend that those with any of the following conditions should consult your physician before using.

| | | |
|---|----------------|---|
|  | WARNING | <ul style="list-style-type: none"> ◆ Those with pacemaker or electronic devices implanted in the body. ◆ Those undergoing treatment, especially those who are not feeling well. ◆ Those with malignant tumors, acute disease, heart disease or severe hypertension. ◆ Need to be supervised. ◆ Women who are pregnant or menstruating. ◆ Those with osteoporosis, distorted joints, dysfunction or recent fracture. ◆ Those with serious or injured skin conditions. ◆ Those with high fever. ◆ The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance. (Need to be supervised) ◆ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. ◆ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. |
|---|----------------|---|

Controller Precautions


| | | |
|---|----------------|---|
|  | CAUTION | <ul style="list-style-type: none"> ◆ Do not operate the controller with wet hands or pull the controller wire by force. ◆ Do not spill water or other liquid into the controller to avoid fault. ◆ Do not lay heavy items on the controller. |
|---|----------------|---|

Cautions Regarding the Power Connectors and Power Cord





| | | |
|---|----------------|--|
|  | CAUTION | <ul style="list-style-type: none"> ◆ The appliance is only to be used with the power supply unit provided with the appliance. ◆ It must only be supplied at safety extra low voltage corresponding to the marking on the appliance. ◆ Do not use a wet hand to unplug the AC cord to avoid electric shock. ◆ Do not pull on the power cord, reach to the front end to unplug it. ◆ Do not squeeze the power cord by heavy objects. ◆ Do not damage, over bend, pull hard or twist the power cord. ◆ If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. |
|---|----------------|--|

SAFETY PRECAUTIONS

Best Circumstances


| | | |
|---|----------------|---|
|  | CAUTION | <ul style="list-style-type: none"> ◆ Do not use this appliance where temperature is over 40 °C. ◆ Do not use this appliance in moist or dusty environment. ◆ Unplug from outlet during thunder or lightening storms. ◆ Do not use outdoors. ◆ Please place the product on the flat level floor. ◆ Do not store near heat or open flame. |
|---|----------------|---|

Best Practices for Safe Use


| | | |
|---|--------------------------|--|
|  | CAUTION | <ul style="list-style-type: none"> ◆ Only for users weighs below 120kg. ◆ Do not use other therapeutic device together with this product. ◆ Use this product only for its intended use as described in this manual. ◆ Appliance should only be used by one person, do not use by two or more persons at the same time to avoid damage to the products. ◆ Do not use the product right after meal, it may cause discomfort. ◆ Remove the accessories from the arms and empty the pockets while use the massage services. ◆ Check the upholstery under the cushions and other spots, if any damages are present, do not use it and refer to a qualified service professional for servicing. ◆ If you feel any abnormal discomfort during the operation of this product, turn off the power immediately and do not use the product. ◆ Use the appliance for 30 minutes each time is highly recommended. ◆ Make sure there is no obstacles behind the chair and there is enough clearance before adjusting the backrest or footrest angle ◆ Make sure no other excessive load pressed on the backrest or footrest, keep children, - pets or any other barrier away from the unit reclining backrest/ extending footrest to prevent any accidental injury. ◆ Please be seated properly while using the appliance to avoid injury to the user or damage to the appliance. ◆ Do not drag or push the chair or roll on its casters on wood floor or carpet to avoid damage. |
|  | PROHIBITED | <ul style="list-style-type: none"> ◆ Never operate this product if it has damaged /exposed parts or power leakage. ◆ Do not stand on or stack heavy objects on the footrest. ◆ Children should be supervised to ensure that they do not play with the massage chair. ◆ Do not fall into sleep while the product is operating. ◆ Avoid using the product under the influence of alcohol. ◆ Do not put hands or foreign objects in the openings of the appliance to avoid injury to the user or damage to the appliance. ◆ If there is any smoke or unusual smell during operation, stop using immediately. |
|  | NO DISASSEMBLE | <ul style="list-style-type: none"> ◆ Do not disassemble this product to avoid failure. ◆ Do not attempt to repair or dismantle the appliance without permission. ◆ Please contact authorized dealer or service agent. |
|  | UNPLUG POWER CORD | <ul style="list-style-type: none"> ◆ Pull out the power cord from the power strips before maintenance. ◆ Never plug in or pull out power cord with wet hand to avoid shock or injury. ◆ Pull out the power cord from the power strips after use. ◆ Unplug from outlet when the power supply is cut. |

▶ NAME AND FUNCTION OF EACH COMPONENT

 External Structure

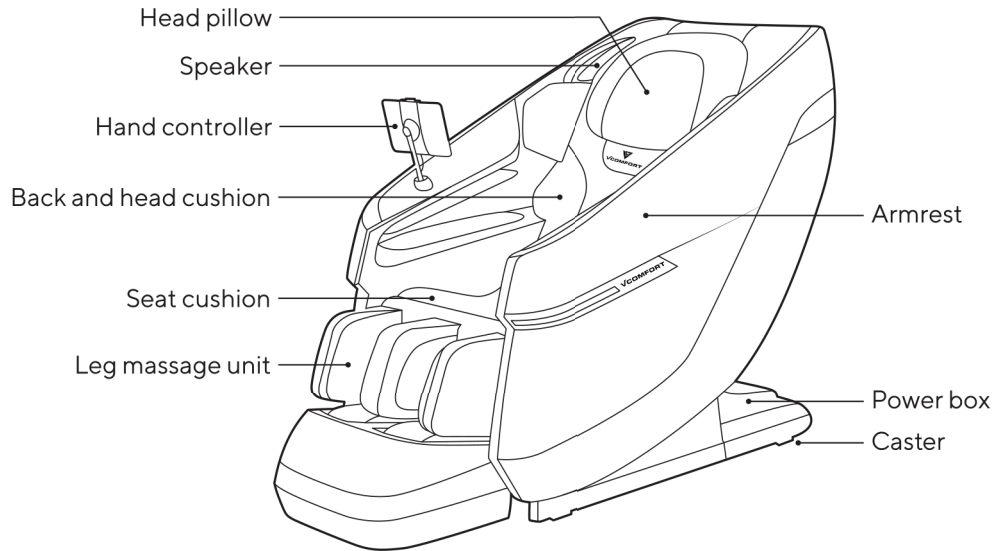


Internal Structure

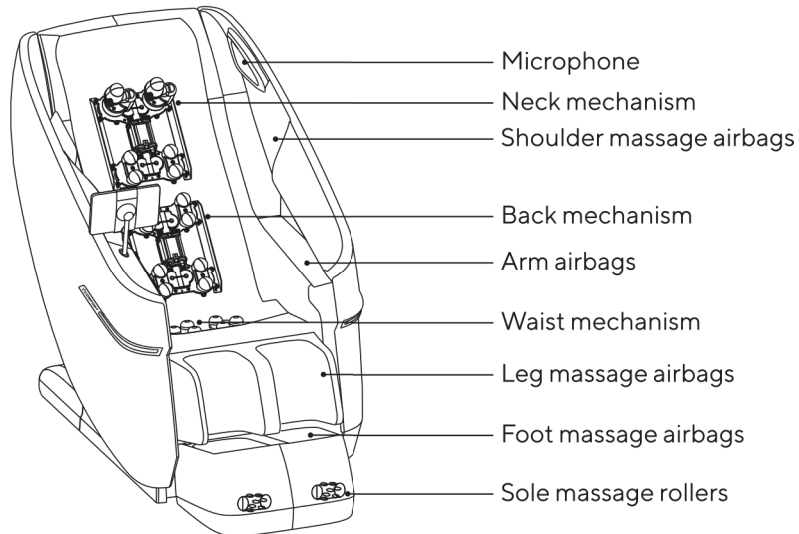 

▶ NAME AND FUNCTION OF EACH COMPONENT

 Power box

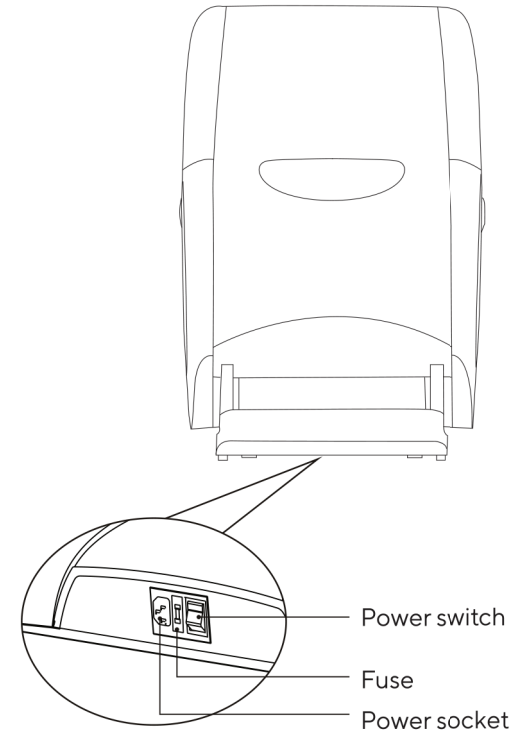


⚠ CAUTION

- ▶ Children should be supervised to ensure that they do not play with the chair or touch the power box.
- ▶ Always unplug the massage chair from the electrical outlet immediately after use.
- ▶ Unplug from outlet during thunder or lightning storms.
- ▶ Turn off the power switch and unplug the massage chair from the electrical outlet while not in use to avoid children power on the massage chair accidentally.
- ▶ When not in use for a long period of time, we recommend that the chair be covered, the power cord be coiled and that the unit be placed in an environment free of dust and moisture.

NAME AND FUNCTION OF EACH COMPONENT

 Tablet Controller

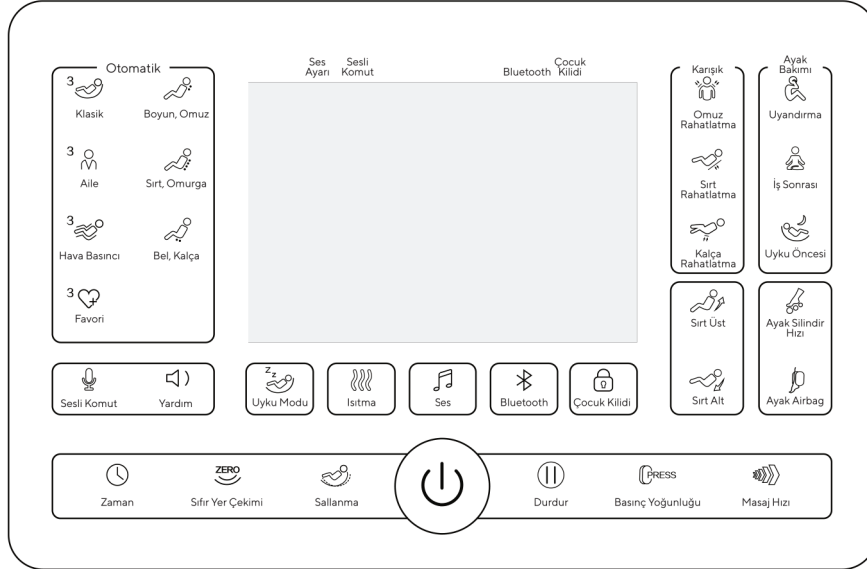

Auto Programs

Classic - Chinese Massage

Chinese Massage uses strong penetrating massage techniques on acupoint and reflex areas to relieve pain, release both physical and mental tension, restore balance and kickstart the body's healing process.

Classic - Thai Stretch

Thai Stretch features back and waist extension, this massage program applies combination of massage techniques from head to toe to restore energy and vitality. It can quickly alleviate fatigue, restore physical fitness, and enhance the elasticity and vitality of joints and ligaments.

Classic - Healthy Breath 🎵

This massage program helps enhance metabolism and the heart and lung functions by inhaling and exhaling with the massage chair voice commands and massage motions.

Family Care - Women's Massage

Designed to pamper and empower, Women's Massage provides a personalized spa-like experience in the comfort of your own home. It's like having a private masseuse at your fingertips.

NAME AND FUNCTION OF EACH COMPONENT

Auto Programs

Family Care - Men's Massage

Men's Massage offers powerful massage techniques and high intensities, aiming to relax the body and alleviate fatigue.

Family Care - Senior's Joy

Delivers a soothing kneading and Shiatsu massage focusing on back, waist and hips to relax tired muscles and promote flexibility.

Air Pressure Massage - Kneading Massage

Full-body airbag massage maintains comfortable pressure, gradually increasing pressure through slow and fast changes, primarily focusing on kneading and pressure massage for various parts of the body.

Air Pressure Massage - Pulse Massage

Full-body airbag massage repeatedly inflates and deflates subtly, primarily focusing on pulsating pressure massage for various parts of the body.

Air Pressure Massage - Alternating Massage

Apply deep pressure to specific areas of the body to improve overall relaxation.

Pain Relief - Neck & Shoulder

Focuses on neck and shoulder massage, with pulsating massage.

Pain Relief - Back & Spine

Focuses on lumbar and back massage, with alternating massage.

Pain Relief - Waist & Hip

Focuses on hip massage, with alternating massage.

Combination Program

(Note: These three programs can be started individually, in pairs, or all three together.)

Relax Shoulder

Mainly targeted at the shoulder and neck roller massage, combined with alternating massage as support.

Back Relief

Mainly targeted at the lumbar and back roller massage, combined with alternating massage as support.

Hip Kneading

Mainly targeted at the hip roller massage, combined with alternating massage as support.

▶ NAME AND FUNCTION OF EACH COMPONENT

Foot Care

Wake Up

High intensity, stimulating the foot reflex arc, with foot roller rotation in both directions, combined with kneading pressure squeezing.

After Work

Medium intensity, relaxation and leisure primarily, with clockwise foot roller rotation, combined with pulsating massage.

Before Bed

Low intensity, alternating pressure primarily, with foot scraping as a supplement.

Tablet Controller Instructions

Sleep

Short press: Sleep Mode On / Sleep Mode Off
Voice guide: Sleep Mode On / Sleep Mode Off
(Note: Sleep mode on / off, with memory function.)

Heating

Short press: Heating level 1, Heating level 2, Heating level 3, Heating Off.
Voice guide: Heating level 1, Heating level 2, Heating level 3, Heating Off

Music

Short press: Volume 1, Volume 2, Volume 3, Music Off
Voice guide: Volume 1, Volume 2, Volume 3, Music Off

Bluetooth

Short press: Bluetooth Music On, Bluetooth Music Off
Voice guide: Bluetooth Music On, Bluetooth Music Off

Child Lock

Short press: Deactivate Child Lock
Voice guide: Child lock deactivated

Time Settings

Short press: 25 minutes, 30 minutes, 10 minutes, 15 minutes, 20 minutes
Voice guide: 25 minutes, 30 minutes, 10 minutes, 15 minutes, 20 minutes

Zero- Gravity

Short press: Zero Gravity position 1 / Zero Gravity position 2, Zero Gravity Off
Voice guide: Relaxing Zero Gravity, Deep Relaxing Zero Gravity, Zero Gravity Off

▶ NAME AND FUNCTION OF EACH COMPONENT

Tablet Controller Instructions

Rocking

Short press: Rocking On, Rocking Off
Voice guide: Zero Gravity Rocking On, Zero Gravity Rocking Off

Power On / Off

Short press: Power On, Power Off
Voice guide: Power On, Power Off

Pause

Short press: Pause / Continue message
Voice guide: Pause / Continue message

Air Pressure Intensity

Short press: Air pressure intensity level 1, Air pressure intensity level 2, Air pressure intensity level 3, Air pressure intensity level 4, Air pressure intensity level 5, Air pressure intensity off
Voice guide: Air pressure intensity level 1, Air pressure intensity level 2, Air pressure intensity level 3, Air pressure intensity level 4, Air pressure intensity level 5, Air pressure intensity off
(Note: After powering on, if the airbag intensity is adjusted to levels 1-5 without activating the airbag program, the airbag program will automatically run, defaulting to the airbag kneading massage program;
When running auto programs or combination programs, the airbag intensity cycles between levels 1-5, and off;
When running foot care, foot airbag, or air pressure massage programs, the airbag intensity cycles between levels 1-5.)

Massage Speed











Short press: Massage speed level 1, Massage speed level 2, Massage speed level 3, Massage speed level 4, Massage speed level 5
Voice guide: Massage speed level 1, Massage speed level 2, Massage speed level 3, Massage speed level 4, Massage speed level 5

Child Lock

Child Lock On / Child Lock Off
Simultaneously press Wake Up and After Work to enable child lock, press again to disable child lock.
Voice guide: Child Lock On / Child Lock Off








▶ NAME AND FUNCTION OF EACH COMPONENT

Tablet Controller Instructions

-  **Relax Shoulder**
Short press: Relax Shoulder
Voice guide: Relax Shoulder On, Relax Shoulder Off
It can be adjusted by pressing Backrest Up / Down button.
-  **Back Relief**
Short press: Back Relief
Voice guide: Back Relief On, Back Relief Off
It can be adjusted by pressing Backrest Up / Down button.
-  **Hip Kneading**
Short press: Hip Kneading
Voice guide: Hip Kneading On, Hip Kneading Off
It can be adjusted by pressing Backrest Up / Down button.
-  **Backrest Up**
Press and hold: hold the button to lift backrest, release the button to stop
Voice guide: Backrest Up
-  **Backrest Down**
Press and hold: hold the button to recline backrest, release the button to stop
Voice guide: Backrest Down
-  **BWake Up**
Short press: Wake Up
Voice guide: Wake Up
-  **After Work**
Short press: After Work
Voice guide: After Work
-  **Before Bed**
Short press: Before Bed
Voice guide: Before Bed
-  **Roller Speed**
Short press: Roller speed level 1, roller speed level 2, roller speed level 3, foot roller off
Voice guide: Roller speed level 1, roller speed level 2, roller speed level 3, foot roller off
-  **Foot Airbag**
Short press: Foot kneading massage, foot pulse massage, foot alternating massage
Voice guide: Foot kneading massage, foot pulse massage, foot alternating massage
(The modes that can respond to this feature are: Foot Care programs, when no auto program is running, or when only foot rollers, rocking, or foot airbags are running.)

▶ NAME AND FUNCTION OF EACH COMPONENT

Tablet Controller Instructions

-  **Classic**
Short press: Chinese Massage, Thai Stretching, Healthy Breath
Voice guide: Chinese Massage, Thai Stretching, Healthy Breath
-  **Neck & Shoulder**
Short press: Neck & Shoulder
Voice guide: Neck & Shoulder
-  **Family Care**
Short press: Women's Massage, Men's Massage, Senior's Joy
Voice guide: Women's Massage, Men's Massage, Senior's Joy
-  **Back & Spine**
Short press: Back & Spine
Voice guide: Back & Spine
-  **Air Pressure Massage**
Short press: Kneading Massage, Pulse Massage, Alternating Massage
Voice guide: Kneading massage, Pulse Massage, Alternating Massage
-  **VWaist & Hip**
Short press: Waist & Hip
Voice guide: Waist & Hip
-  **Favorites**
Long press this button to add the currently running automatic program as a favorite or remove the currently running automatic program from favorites.
Voice guide: The current auto program is added as a favorite. / The current auto program is removed from favorites.
Short press: Favorite 1, Favorite 2 and Favorite 3
Voice guide: Favorite 1 Name, Favorite 2 and Favorite 3
Favorite Messages is well-filled: The favorite program list is full and cannot be added. Please remove one before adding
No favorite programs: Please run a program first and long press the favorite button to add the program.
Programs that cannot be added: Air pressure massage, Foot airbag, Combination programs.

▶ NAME AND FUNCTION OF EACH COMPONENT

Off-line Voice Control

Voice device can be activated by touching the square shaped groove by the voice command microphone at left armrest or saying "Switch to voice mode", "Please tell your command" will be heard when voice is activated.(Massage chair need to be started)

| Your Command | Massage Chair Reply | REMARK |
|---------------------------|---|---|
| SWITCH TO VOICE MODE | OK | |
| Turn on the massage chair | OK, Turn on the massage chair | |
| Power off | OK, Power off | |
| Pause | OK | |
| Continue massage | OK | |
| Chinese Massage | OK, Chinese Massage | |
| Thai Stretching | OK,Thai Stretching | |
| Healthy Breath | OK, Healthy Breath | adjust the volume with the "MUSIC " button. |
| Women's Massage | OK, Women's Massage | |
| Men's Massage | OK, Men's Massage, | |
| Senior's Joy | OK, Senior's Joy | |
| Kneading Massage | OK, Kneading Massage, | The mechanism remains motionless |
| Pulse Massage | OK, Pulse Massage | The mechanism remains motionless |
| Alternating Massage | OK, Alternating Massage | The mechanism remains motionless |
| Neck and Shoulder | OK, Neck and Shoulder | |
| Back and Spine | OK, Back and Spine | |
| Waist and Hip | OK, Waist and Hip | |
| Relax Shoulder | OK, Relax Shoulder on OK, Relax Shoulder off | |
| Back Relief | OK, Back Relief on OK, Back Relief off | |
| Hip Kneading | OK, Hip Kneading on OK, Hip Kneading off | |
| Wake Up | OK, Wake Up | |
| After Work | OK, After Work | |
| Before Bed | OK, Before Bed | |
| Change a program | XXXX | |
| Backrest Up | OK, Backrest Up | |
| Backrest Down | OK, Backrest Down | |

▶ NAME AND FUNCTION OF EACH COMPONENT

Off-line Voice Control


| | | |
|--|--|--|
| Foot roller speed level 1 Foot roller speed level 2 Foot roller speed level 3 Foot roller off | OK, Foot roller speed level 1 OK, Foot roller speed level 2 OK, Foot roller speed level 3 OK, Foot roller off | |
| Air Pressure Mode | OK, Foot Kneading Massage OK, Foot Pulse Massage OK, Foot Alternating Massage OK, Foot Air Pressure Massage Off | |
| Voice Guide On Turn Off Voice Guide | OK, Voice Guide On OK, Voice Guide Off | |
| Sleep mode On Sleep mode Off | OK, Sleep mode On OK, close sleep mode | |
| Heating level 1 Heating level 2 Heating level 3 Heating off | OK, Heating level 1 OK, Heating level 2 OK, Heating level 3 OK, Heating off | |
| Volume 1 Volume 2 Volume 3 Music Off VOLUME-UP | OK, Volume 1 OK, Volume 2 OK, Volume 3 OK, Music Off OK, Volume is at maximum | |
| Bluetooth Music On Turn Off Bluetooth Music | OK, Bluetooth Music On Bluetooth Music Off | |
| 25 minutes 30 minutes 10 minutes 15 minutes 20 minutes | OK, 25 minutes, 30 minutes, 10 minutes, 15 minutes, 20 minutes | |
| Relaxing Deep Relaxing Zero Gravity off. | OK, Relaxing Zero Gravity OK, Deep Relaxing Zero Gravity OK, Zero Gravity Off | |
| Rocking On Stop Rocking | OK, Zero Gravity Rocking On OK, Zero Gravity Rocking Off | |
| Minimum Air Pressure Intensity Low Air Pressure Intensity Medium Air Pressure Intensity High Air Pressure Intensity Maximum Air Pressure Intensity Air Pressure Off | OK, Air pressure intensity level 1 OK, Air pressure intensity level 2 OK, Air pressure intensity level 3 OK, Air pressure intensity level 4 OK, Air pressure intensity level 5 OK, Air pressure intensity off | |
| Minimum Speed Low Speed Medium Speed High Speed Maximum Speed | OK, Minimum Speed OK, Low Speed OK, Medium Speed OK, High Speed OK, Maximum Speed | |

▶ PRELIMINARY CHECKS

Position & Placement for Installation

Clearance space for the massage chair:

 
- ▶ Ensure there is an adequate clearance for the installation: It needs 22cm clearance for the reclining of the backrest; It needs 20cm clearance space for the extension of footrest and sliding forward of the chair.
- ▶ Keep it 1 meter away from the TV, radio or other audio/video appliance to avoid signal interference.

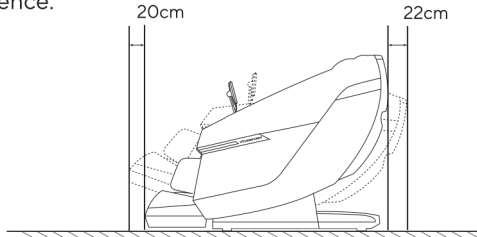

▶ PRELIMINARY CHECKS

Floor Protection

 - ▶ We recommend to place a piece of carpet or soft mat underneath it to avoid damaging the floor.

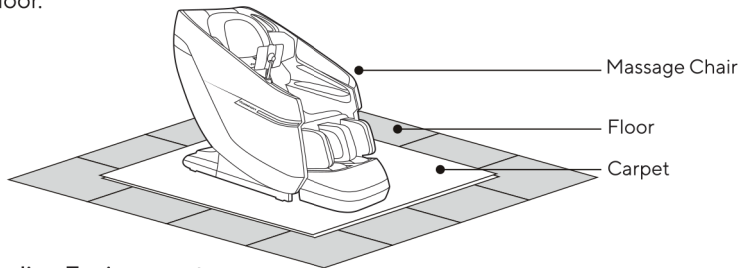

Surrounding Environment



Do not use the massage chair in high moisture environment such as near swimming pool or bathroom to prevent electric shock accident.



Please keep the massage chair away from heated surfaces to prevent fire hazard or damage to the product.

Grounding



 
This product must be grounded, the plug must be plugged into an appropriate 3-wire grounded outlet that is properly installed and grounded in accordance with all local codes and ordinances to reduce risk of electrical shock.

▶ PRELIMINARY CHECKS

Installation Method


Step 1, Take all massage chair units out of the cartons.

- ▶ Unpack the cartons and take all sewing and other accessories out of the cartons.
- ▶ Before beginning installation, please verify that all components are included (check with the packing list carefully).

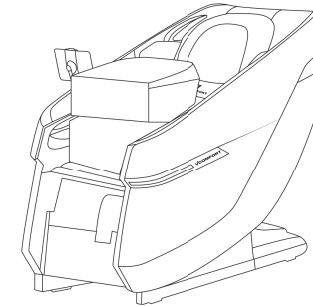


Step 2. Flip down the leg unit

 - ▶ Flip down the leg unit; then zip up the back cushion and leg covers.

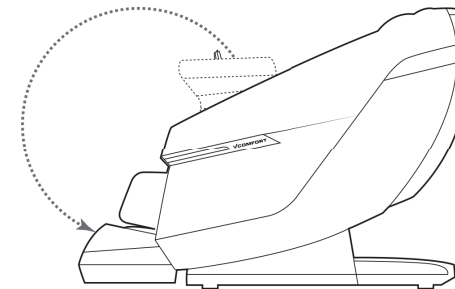

 
- ▶ Connect the power cable to the product power connector port located at the power box of the product (Check the illustration below).

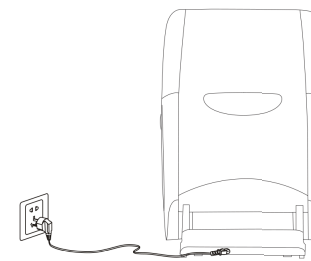

PRELIMINARY CHECKS

Moving the Massage Chair

 - ▶ Roll the chair on its casters to the desired location.
- ▶ Incline the backrest to upright position.
- ▶ Turn off the power switch and unplug the appliance from the electrical outlet.
- ▶ Using two people, push down on the backrest and lift up on the front side by grabbing the moving Holder located to the front bottom of the armrest), roll the chair on its casters to the desired location (check the sketch for reference).

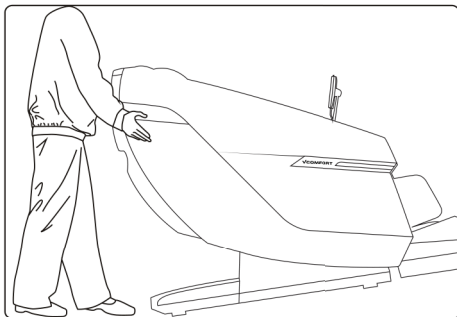


CAUTION

- ▶ Do not move the chair when there is user inside.
- ▶ To carry this product, do not lift by the footrest or armrest, hold the chassis and steady the backrest (have 4 or more people to carry the product).

Connecting to Power

 - ▶ Connect this appliance to a 3-wire properly grounded outlet.
- ▶ Turn on the main power switch by the right hand side of the massage chair.

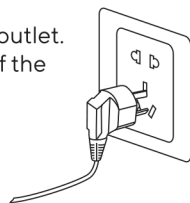

CAUTION

- ▶ Please verify that there is no damage to the supply cord before switching on the massage chair.
- ▶ Please verify that the main power switch is turned off before connecting to power.

CARE AND MAINTENANCE

Commissioning

- ▶ Use the controller to recline the backrest to its lowest position, raise and extend the footrest to its top position, make sure there is enough clearance before commissioning.
- ▶ Return the backrest and footrest back to its default position after commissioning and turn off the power switch.
- ▶ To choose the massage program, please check the Controller Instructions for reference

Before Sitting in the Chair

- ▶ Ensure the footrest is well assembled before sitting on the massage chair.
- ▶ Ensure the massage chair is returned to its original position before sitting on it. If there is any part not in default position, please turn on the massage chair to allow it to restore.

CAUTION

- ▶ Do not take seat while the legrest is lifted.
- ▶ Do not put excessive load on the legrest to avoid damage.

WARNING

- ▶ Do not play on the massage chair or operate it improperly.
- ▶ Ensure there is no obstruction when raising or reclining the backrest and footrest.
- ▶ Do not put foot, fingers or any other objects in the openings of the chair when it is in the reclining, raising or restoring motion.
- ▶ Ensure that massage chair is restored back to its original position before getting off the massage chair.

After Use

- ▶ Always unplug the massage chair from the electrical outlet immediately after use.
- ▶ Turn off the power switch and unplug the massage chair from the electrical outlet while not in use to avoid children power on the massage chair accidentally.
- ▶ When not in use for a long period of time, we recommend that the chair be covered, the power cord be coiled and that the unit be placed in an environment free of dust and moisture.

PRODUCT CARE AND STORAGE

Care Instructions

- ▶ To treat stains on back panel, armrest, footrest, plastic parts or air hose, spot clean with mild detergent foam, then wipe it with a dry cleaning cloth.
- ▶ To treat stains on controller, power box, spot clean with a dry cleaning cloth.
- ▶ To treat stains on back cushion or pillows, use a water-based upholstery cleaner only, wipe it with moist cloth, then air dry.
- ▶ To clean the foot/calf unit covers, remove it from the chair, hand wash with a mild detergent, then line dry.

WARNING

- ▶ Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- ▶ Pull out the power cord from the power strips before care and maintenance.
- ▶ To avoid electrical shock or injury, do not touch the power cord with wet hands.
- ▶ Make sure no detergent enter into the power box while cleaning.
- ▶ Do not use benzene, thinner or other solvents on your product, it may cause fading or damage to the product.
- ▶ Do not iron the upholstery.

Storage Methods

- ▶ Cover the product with a dust-free cloth to prevent collection of dust if not in use of a long period of time.

CAUTION

- ▶ Do not leave this product exposed to direct sunlight for long periods of time. This may cause fading or damage.

Warm Tips

- ▶ During daily use, please check for the following symptoms:
- ▶ Burnt smell.
- ▶ Power flickers on and off when touching the charging cable.
- ▶ The power cord is hot.
- ▶ Other abnormal symptoms.

CAUTION

- ▶ Please stop using the product to avoid breakdowns or accidents if any above symptom exists.
- ▶ Switch off the power button and disconnect the plug, contact the local distributors or supplier for repair.
- ▶ All other servicing except above care and maintenance should be serviced by an authorized dealer or service center.

WARNING

Pull out the power cord from the power strips before care and maintenance. To avoid electrical shock or injury, do not touch the power cord with wet hands. Do not try to dismantle or repair the product yourself, please send your massage chair to the authorized service center.

TROUBLESHOOTING

| No. | Symptoms | Possible Causes | Possible Solutions |
|-----|---|--|--|
| 1 | Noise is heard while in use | This sound is normal and comes from the air pump motor or other mechanical parts rubbing against the cloth cover | No need to take any measures |
| 2 | Appliance does not start | The power cord is not secured into the socket | Insert the power plug properly into the power socket |
| | | Power switch is off | Turn on the switch |
| | | The fuse is blown | Replace only with a fuse of same type and rating |
| 3 | No music comes from the speaker | The volume is turned to the lowest | Adjust the speaker volume from the mobile devices |
| | | Bluetooth is off | Switch on Bluetooth |
| | | Bluetooth connected with other device | Reconnect Bluetooth |
| 4 | Backrest or footrest can not raise or recline | Excessive load has been pressed on the backrest or legrest | Reduce the load and try again |
| 5 | Airbag malfunction | The air hose is blocked | Straighten the air hose and clear out the blockage |
| 6 | During the massage, both arms are simultaneously held by the airbags. | Massage technique | No need to take any measures |

If problem remains, please contact the dealer for maintenance.

Important: Do not attempt to repair this product yourself, our company shall not be liable for the injury or damage caused by any servicing without authorization.

TECHNICAL SPECIFICATIONS

| Product Type | Massage Chair |
|--------------------------------------|--------------------------|
| Model No. | A36 SMART |
| Rated Voltage | 220-240V~ |
| Rated Frequency | 50-60Hz |
| Rated Power | 50W |
| Packaging Dimension | 128 x 77 x 114 cm |
| Weight | N.W.: 64kg G.W.: 78kg |
| Max User weight | 120kg |
| Max User Height | 185cm |
| Manufacturer warranty (Domestic) | 3 Year |
| Manufacturer warranty (Non Domestic) | 1 Year |
| Back Wall clearance | 25cm |
| Bluetooth Connection Name | MeDiFiT Pro |



VCOMFORT

Your Physio, Delivered Home.

📍 Safe store, 198 - 202 Waterloo Road, Birmingham B25 8LD

☎ 03335779597

🌐 www.vcomfort.co.uk

